

4000 Series **Default** Programming  
For ES-500 Board with  
113-0102-00 Chip

OS-6  
OC-6  
HO-3  
SS-6  
AC-5  
DC-3  
UJ-0  
D1-6  
D2-1  
D3-1  
LC-3  
UL-8  
AF-1  
Ct-of  
PG-of  
Cr-on  
SL-on  
LL-of  
HS-of  
U1-not used  
U2-not used  
U3-not used

Highlighted items are unique for this  
Operator



EZ-7000 & 28k Series **Default**  
Programming for ES-500 Board with  
113-0102-01 Chip

OS-2  
OC-4  
HO-3  
SS-6  
AC-3  
DC-3  
UJ-0  
D1-6  
D2-1  
D3-1  
LC-3  
UL-8  
AF-1  
Ct-of  
PG-of  
Cr-on  
SL-of  
LL-of  
HS-of  
U1-not used  
U2-not used  
U3-not used

Highlighted items are unique for this  
Operator

**NOTE:** If installing a lock controlled  
by this board the **LL** function **MUST**  
be turned on.

For additional programming  
parameters and instructions see the  
installation instructions.

See "Power Assist Supplement" for  
programming Power Assisted Units.